


Model No. : JEZUMC1

# Zureni<sup>®</sup>

## Manual

# CHOPPER

Slice & dice easily

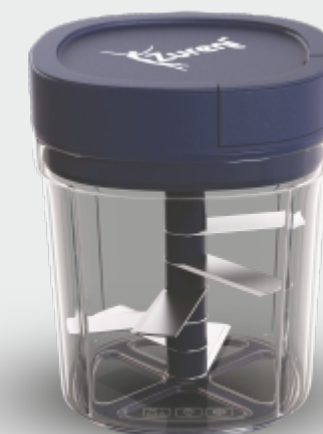

Instruction Manual

# Zureni<sup>®</sup>

**Marketed & Packed by**

**AllinPro Industries Pvt. Ltd.**

C-38, Sector-63, Noida, U.P-201301, India

Website : [www.zureni.com](http://www.zureni.com)

Email : [sales@zureni.com](mailto:sales@zureni.com)

Contact Us : +91-9313132789

# Welcome to Zureni

Dear Customer,

We are thrilled to welcome you to the Zureni family and extend our congratulations on your recent purchase of our product.

We take pride in delivering premium-quality products with top-of-the-line performance that exceeds industry standards. We are confident that you will find Zureni Manual Chopper to be an exceptional appliance that meets all of your needs and expectations.

This user manual has been carefully prepared to assist you in operating and maintaining your new appliance. We highly recommend that you take the time to review the instructions thoroughly to ensure proper use and maintenance.

We guarantee that our appliance is constructed with the utmost care and exceptional quality to provide you and your family with reliable and hassle-free service for many years to come.

Thank you for choosing Zureni. We value your trust and look forward to providing you with an exceptional customer experience.

**Sincerely,  
The Zureni Team**

## TABLE OF CONTENTS

- 1. Introduction .....3
- 2. Features of Zureni Manual Chopper.....3
- 3. Know Your Manual Chopper.....3
- 4. Items in the Box.....4
- 5. Using zureni manual chopper .....4
- 6. How to Operate .....4
- 7. Cleaning and Maintenance .....5
- 8. Precautions.....5
- 9. Important Safety Instructions .....5
- 10. Technical Specifications .....6

## INTRODUCTION

At Zureni, we strive to create innovative solutions that simplify your daily routine and enhance your lifestyle. Our latest product, the Zureni Manual Chopper, is designed to transform the way you prepare food in the kitchen.

Unlike other choppers, the Zureni Manual Chopper is a portable, high-performance appliance that saves time and effort in meal preparation. With its sleek and compact design, the Zureni Manual Chopper is ideal for kitchens, camping trips, boats, and Rvs.

## FEATURES OF ZURENI MANUAL CHOPPER

- Portable and lightweight design
- Silicone-supported Base
- Transparent jar
- 900ML Capacity
- Versatile and easy to use

## KNOW YOUR MANUAL CHOPPER

1. Pull Handle
2. Lid
3. Blade Assembly
4. Bowl
5. Locating Pin
6. Anti-Skid base



## ITEMS IN THE BOX

1. Zureni Manual Chopper : 1 N

## USING ZURENI MANUAL CHOPPER

**When using your chopper for the first time, follow these steps:**

1. Carefully unpack the chopper, being mindful of the sharp blades.
2. Prior to use, wash the chopper bowl, lid, and blade with warm soapy water.
3. Rinse the parts under clear water and dry them thoroughly. Do not use abrasive cleaners or scouring pads to clean the chopper, and avoid using very hot water or putting the parts in the dishwasher.
4. After cleaning, dry all parts completely and store them in a clean, dry place.

## HOW TO OPERATE

**To use the manual chopper, follow these steps:**

1. Place the ingredients you want to chop into the chopper bowl, making sure not to overfill it.
2. Close the lid securely and pull the string a few times until the ingredients are chopped to your desired consistency.
3. If you need finer chops, pull the string a few more times.
4. Once you are done chopping, carefully remove the lid and take out the chopped ingredients.
5. Clean the chopper with mild soap and water, and let it dry completely before storing.

## CLEANING & MAINTENANCE

To clean the Zureni Manual Chopper, please follow these instructions:

1. Make sure all parts of the chopper are separated before cleaning.
2. Rinse the chopper bowl, lid, and blades under running water.
3. Use a soft sponge or cloth with mild detergent to clean the bowl, lid, and blades.
4. Avoid using abrasive cleaning tools or harsh chemicals that could damage the blades or the chopper.
5. Dry all the parts thoroughly before assembling them again.
6. Store the chopper in a dry and clean place.

## PRECAUTIONS

1. To clean the main unit, only use a damp cloth.
2. When cleaning the blades, handle them with care as they are sharp. Make sure to unplug the chopper from the mains supply before cleaning.
3. Take extra care while cleaning the blades to avoid any injury.
4. Always keep the chopper away from children's reach when not in use.

## IMPORTANT SAFETY INSTRUCTIONS

To clean the Zureni Manual Chopper, please follow these instructions:

1. Keep the manual chopper away from walls and other objects to ensure that there is enough space around it for safe operation.
2. Avoid touching the sharp blades of the chopper while it is in use to prevent injury.
3. Always use the chopper on a stable and flat surface to prevent it from slipping or falling during use.
4. Keep the chopper away from children and store it in a safe and secure place when not in use.
5. Do not attempt to sharpen or modify the blades of the chopper, as this may cause damage or injury.
6. When cleaning the chopper, be careful when handling the blades to avoid any injury.
7. Always disassemble the chopper before cleaning, and avoid submerging any parts in water to prevent damage or rust.
8. If the chopper becomes damaged or breaks, do not attempt to repair it yourself, and instead seek professional help.

## TECHNICAL SPECIFICATIONS

Product	Zureni Manual Chopper
Product Generic Name	Chopper
Colour	Blue
Material	ABS Plastic
Bowl Material	Food-grade Plastic
Bowl Capacity	900 ml
Base	Anti-skid
Chopping Blade	6 Blades, Stainless Steel